

## Your Severe Maintenance Schedule: 2018 Subaru Forester 2.5i Premium

Check Point	Check List
3,000 miles / 3 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
6,000 miles / 6 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
9,000 miles / 9 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
12,000 miles / 12 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
15,000 miles / 15 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
18,000 miles / 18 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Replace Engine oil and oil filter</li> </ul>
21,000 miles / 21 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
24,000 miles / 24 month service	<ul style="list-style-type: none"> <li>- Inspect Brake line</li> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
27,000 miles / 27 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
30,000 miles / 30 month service	<ul style="list-style-type: none"> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> </ul>
33,000 miles / 33 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
36,000 miles / 36 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>

Check Point	Check List
39,000 miles / 39 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
42,000 miles / 42 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
45,000 miles / 45 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
48,000 miles / 48 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
51,000 miles / 51 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
54,000 miles / 54 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Replace Engine oil and oil filter</li> <li>- Perform Tire rotation and inspection</li> </ul>
57,000 miles / 57 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
60,000 miles / 60 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Clutch system</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Replace Spark plugs</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> <li>- Inspect Wheel bearings</li> </ul>
63,000 miles / 63 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
66,000 miles / 66 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
69,000 miles / 69 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
72,000 miles / 72 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Replace Fuel filter</li> </ul>

Check Point	Check List
75,000 miles / 75 month service	<ul style="list-style-type: none"> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
78,000 miles / 78 month service	<ul style="list-style-type: none"> <li>- Inspect Disc brake pad and disc</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
81,000 miles / 81 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
84,000 miles / 84 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
87,000 miles / 87 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
90,000 miles / 90 month service	<ul style="list-style-type: none"> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> </ul>
93,000 miles / 93 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
96,000 miles / 96 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
99,000 miles / 99 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
102,000 miles / 102 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>

Check Point	Check List
105,000 miles / 105 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
108,000 miles / 108 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
111,000 miles / 111 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
114,000 miles / 114 month service	<ul style="list-style-type: none"> <li>- Inspect Disc brake pad and disc</li> <li>- Inspect Fuel lines</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
117,000 miles / 117 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
120,000 miles / 120 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Clutch system</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Replace Spark plugs</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> <li>- Inspect Wheel bearings</li> </ul>
123,000 miles / 123 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
126,000 miles / 126 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
129,000 miles / 129 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>



Check Point	Check List
132,000 miles / 132 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Replace Engine coolant - after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter</li> </ul>
135,000 miles / 135 month service	<ul style="list-style-type: none"> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
138,000 miles / 138 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
144,000 miles / 144 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Replace Fuel filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
141,000 miles / 141 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
147,000 miles / 147 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

**Check Point****Check List**

- 150,000 miles / 150 month service
- Replace Air cleaner element
  - Inspect Axle boots and joints
  - Replace Brake fluid.
  - Inspect Brake line
  - Inspect CVTF
  - Replace Clutch fluid (MT) - if used in a high humidity or mountain area
  - Inspect Cooling system
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Front and rear differential gear oil
  - Replace Front and rear differential gear oil - if used for repeated trailer towing
  - Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.
  - Inspect Fuel lines
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection
  - Inspect Transmission gear oil
  - Replace Transmission gear oil - if used for repeated trailer towing
  - Inspect V-belt

- 153,000 miles / 153 month service
- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months

- 156,000 miles / 156 month service
- Replace A/C filter every 12 months or 19,200 km (12,000 miles)
  - Inspect Axle boots and joints
  - Inspect Brake line
  - Inspect Clutch system
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Fuel lines
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection

- 159,000 miles / 159 month service
- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months

- 162,000 miles / 162 month service
- Inspect Axle boots and joints
  - Replace Engine oil and oil filter
  - Inspect Fuel lines
  - Inspect Brake line
  - Inspect Disc brake pad and disc
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection

Check Point	Check List
165,000 miles / 165 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
168,000 miles / 168 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
171,000 miles / 171 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
174,000 miles / 174 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
177,000 miles / 177 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
180,000 miles / 180 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Clutch system</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Replace Spark plugs</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> <li>- Inspect Wheel bearings</li> </ul>
183,000 miles / 183 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
186,000 miles / 186 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
189,000 miles / 189 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
192,000 miles / 192 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>

Check Point	Check List
195,000 miles / 195 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
198,000 miles / 198 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
201,000 miles / 201 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
204,000 miles / 204 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> </ul>
207,000 miles / 207 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
210,000 miles / 210 month service	<ul style="list-style-type: none"> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine coolant - after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> </ul>
213,000 miles / 213 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
216,000 miles / 216 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Replace Fuel filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
219,000 miles / 219 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
222,000 miles / 222 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>

Check Point	Check List
225,000 miles / 225 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
228,000 miles / 228 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
231,000 miles / 231 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
234,000 miles / 234 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
237,000 miles / 237 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

Check Point	Check List
240,000 miles / 240 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Replace Air cleaner element</li> <li>- Inspect Axle boots and joints</li> <li>- Replace Brake fluid.</li> <li>- Inspect Brake line</li> <li>- Inspect CVTF</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Inspect Clutch system</li> <li>- Inspect Cooling system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Front and rear differential gear oil</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Replace Spark plugs</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> <li>- Inspect Transmission gear oil</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> <li>- Inspect V-belt</li> <li>- Inspect Wheel bearings</li> </ul>
243,000 miles / 243 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
246,000 miles / 246 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
249,000 miles / 249 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
252,000 miles / 252 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>



Check Point	Check List
255,000 miles / 255 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
258,000 miles / 258 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
261,000 miles / 261 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
264,000 miles / 264 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
267,000 miles / 267 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

**Check Point****Check List**

- 270,000 miles / 270 month service
- Replace Air cleaner element
  - Inspect Axle boots and joints
  - Replace Brake fluid.
  - Inspect Brake line
  - Inspect CVTF
  - Replace Clutch fluid (MT) - if used in a high humidity or mountain area
  - Inspect Cooling system
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Front and rear differential gear oil
  - Replace Front and rear differential gear oil - if used for repeated trailer towing
  - Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.
  - Inspect Fuel lines
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection
  - Inspect Transmission gear oil
  - Replace Transmission gear oil - if used for repeated trailer towing
  - Inspect V-belt

- 273,000 miles / 273 month service
- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months

- 276,000 miles / 276 month service
- Replace A/C filter every 12 months or 19,200 km (12,000 miles)
  - Inspect Axle boots and joints
  - Inspect Brake line
  - Inspect Clutch system
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Fuel lines
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection

- 279,000 miles / 279 month service
- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months

- 282,000 miles / 282 month service
- Inspect Axle boots and joints
  - Inspect Brake line
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Fuel lines
  - Inspect Parking brake
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection

Check Point	Check List
285,000 miles / 285 month service	<ul style="list-style-type: none"> <li>- Replace Brake fluid - if used in a high humidity or mountain area</li> <li>- Replace Clutch fluid (MT) - if used in a high humidity or mountain area</li> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> <li>- Replace Front and rear differential gear oil - if used for repeated trailer towing</li> <li>- Replace Transmission gear oil - if used for repeated trailer towing</li> </ul>
288,000 miles / 288 month service	<ul style="list-style-type: none"> <li>- Replace A/C filter every 12 months or 19,200 km (12,000 miles)</li> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Replace CVTF - if used for repeated trailer towing</li> <li>- Inspect Clutch system</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine coolant - after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter</li> <li>- Replace Engine oil and oil filter</li> <li>- Replace Fuel filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
291,000 miles / 291 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>
294,000 miles / 294 month service	<ul style="list-style-type: none"> <li>- Inspect Axle boots and joints</li> <li>- Inspect Brake line</li> <li>- Inspect Disc brake pad and disc</li> <li>- Replace Engine oil and oil filter</li> <li>- Inspect Fuel lines</li> <li>- Inspect Parking brake</li> <li>- Inspect Steering system (power steering)</li> <li>- Inspect Suspension</li> <li>- Perform Tire rotation and inspection</li> </ul>
297,000 miles / 297 month service	<ul style="list-style-type: none"> <li>- Replace Engine oil and oil filter - if used for repeat short distance driving, extreme cold weather area, or repeated trailer towing - every 3,000 miles (4,800 km) or 3 months</li> </ul>

**Check Point****Check List**

- 300,000 miles / 300 month service
- Replace A/C filter every 12 months or 19,200 km (12,000 miles)
  - Replace Air cleaner element
  - Inspect Axle boots and joints
  - Replace Brake fluid.
  - Inspect Brake line
  - Inspect CVTF
  - Replace Clutch fluid (MT) - if used in a high humidity or mountain area
  - Inspect Clutch system
  - Inspect Cooling system
  - Inspect Disc brake pad and disc
  - Replace Engine oil and oil filter
  - Inspect Front and rear differential gear oil
  - Replace Front and rear differential gear oil - if used for repeated trailer towing
  - Replace Fuel filter every 72 months (6 years) or 72,000 miles. When the vehicle is used in extremely hot or cold weather areas, replace fuel filter more frequently.
  - Inspect Fuel lines
  - Inspect Parking brake
  - Replace Spark plugs
  - Inspect Steering system (power steering)
  - Inspect Suspension
  - Perform Tire rotation and inspection
  - Inspect Transmission gear oil
  - Replace Transmission gear oil - if used for repeated trailer towing
  - Inspect V-belt
  - Inspect Wheel bearings